


:: Remote Control Overview

- 1 TV (Power)** Power TV on or off. (See page 26 to program the remote to operate your TV.)
- 2 ReplayTV (Power)** Power ReplayTV on or off.
- 3 0-9** Tune to channels; jump to a channel in the Channel Guide.
- 4 Enter** Display a current show's menu while in the Channel Guide.
- 5 Channel Guide** Display TV listings.
- 6 Zones** Search TV listings by category.
- 7 Arrow (Navigation) Buttons** Move on-screen highlight.
- 8 Select** Choose on-screen options; view channel surfing display while watching live TV.
- 9 Exit** Exit on-screen menus.
- 10 Play/Slow** Play/slow motion.
- 11 QuickSkip** Skip 30 seconds of a recorded or delayed show.
- 12 Fast Forward** Fast forward recorded or delayed show; frame-by-frame advance while paused.
- 13 Stop** Stop playback of show.
- 14 Return to Live** Return to live TV while watching a show delayed.
- 15 Channel ▲/▼** Change channels; move one screen at a time up or down in guides and menus.
- 16 Mute** Mute the volume of the programmed TV.
- 17 Volume +/-** Adjust the volume of the programmed TV.
- 18 Display** Program information about current show.
- 19 Commercial Advance** Turn COMMERCIAL ADVANCE on and off for the current show.
- 20 Rewind** Rewind show.
- 21 Instant Replay** Return 7 seconds and replay a segment.
- 22 Pause** Pause live TV and recorded shows.
- 23 Record** Record show from Channel Guide or while viewing live TV.
- 24 Menu** Display ReplayTV Main Menu.
- 25 Replay Guide** Play your recorded shows.
- 26 Jump** Jump between a recorded show and live TV, two live TV shows, or two recorded shows.

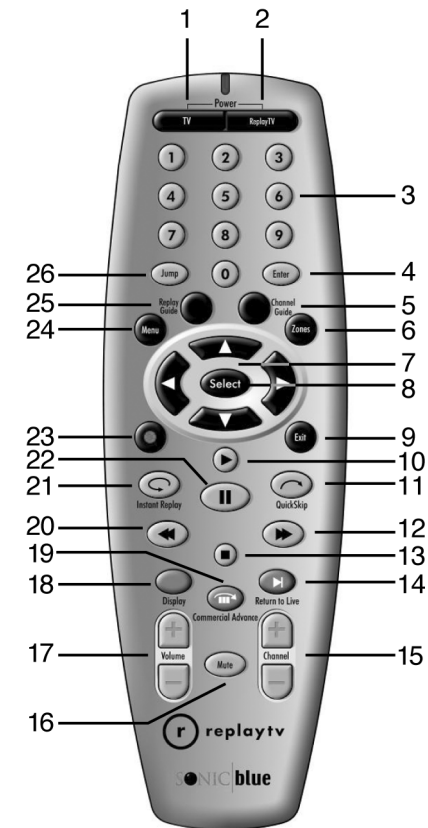

System Information

View the system information for your ReplayTV. This screen lists:

- the version of software your ReplayTV is using
- the Serial Number of your ReplayTV
- the Internet Serial Number of your ReplayTV
- the Inbound Port Number, if set
- the ReplayTV Service Key for Service Activation

:: Remote Control Setup

Follow these steps to program the remote control to operate your television, TV/VCR combo or TV/DVD combo. When programmed, the ReplayTV remote will control your TV's power and volume.

- 1 Press and hold the Mute and TV (Power) buttons until the LED blinks twice.
- 2 Enter the 4-digit code for your brand of television (see listings on pages 26-28).
 - For example, for Sony, press Mute and TV (Power) simultaneously, and then press 0-0-0-0.
 - If a valid code has been entered, the LED at the top of the remote will blink twice.
 - If an invalid code has been entered, there will be one long blink and the remote will revert to the previously programmed code.
- 3 To test the code, press the TV (Power) button on the remote control.
 - If your TV turns on/off, programming is complete.
 - If your TV does not turn on/off, try another code for your brand of television. Not all TVs can be programmed.



- *To clear all settings, press Mute + TV(Power), then press 9-8-1.*

Remote Control Setup Codes

3M 0737
A-Mark 0003
AOE 0030, 0019, 0003, 0052, 0137, 0185
Abex 0032
Admiral 0093, 0463
Advent 0761
Adventura 0046
Aik 0092
Aiwa 0701
Akai 0030, 0098, 0591
Alaron 0179, 0183, 0216
Ambassador 0177
America Action 0180
Ampro 0751
Anam 0180, 0004, 0009, 0068
Anam National 0055, 0161
Apex Digital 0748
Archer 0003
Audinac 0391
Audiovox 0451, 0180, 0003, 0092, 0623
Barco 0410, 0479
Baysonic 0180
Belcor 0019
Bell & Howell 0154, 0016
Bradford 0180
Brockwood 0019
Broksonic 0236, 0463, 0003, 0426, 0642
Bush 0355
CCE 0037, 0217, 0329
CXC 0180
Candle 0030, 0056, 0046, 0186
Carnivale 0030
Carver 0054, 0170
Casio 0611

Celebrity 0000
Cineral 0451, 0092
Citizen 0060, 0030, 0056, 0039, 0046, 0092, 0186, 0280, 0561
Clairtone 0185
Compaq 0749, 0750
Concerto 0056
Contec 0180, 0157, 0158, 0185
Craig 0180, 0161
Crosley 0054
Crown 0180, 0039, 0672
Curtis Mathes 0047, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0145, 0056, 0016, 0039, 0166, 0415, 0466, 0702, 0747
Daewoo 0451, 0019, 0039, 0066, 0067, 0091, 0092, 0623, 0624
Daytron 0019
Denon 0145, 0511
Dumont 0017, 0019
Dwin 0720, 0774
Dynatech 0049
Ectec 0391
Eiki 0735
Electroband 0000, 0185
Electrohome 0381, 0389, 0409, 0446
Emerson 0154, 0236, 0463, 0180, 0282, 0178, 0019, 0179, 0039, 0038, 0158, 0177, 0181, 0182, 0183, 0185, 0270, 0280, 0623, 0624
Envision 0030
Fisher 0154, 0159
Focus 0711
Fujitsu 0179, 0643, 0683
Funai 0180, 0179, 0171
Futurtech 0180

GE 0047, 0051, 0451, 0093, 0282, 0178, 0021, 0055, 0027, 0029, 0135, 0138, 0174, 0251, 0279, 0747
Gibralter 0017, 0030, 0019
GoldStar 0030, 0178, 0019, 0056, 0001, 0002, 0032, 0106, 0409
Goodmans 0360
Gradiente 0053, 0056, 0170, 0392
Grundig 0037, 0195
Grunpy 0180, 0179
Hallmark 0178
Harley Davidson 0179, 0043
Harman/Kardon 0054, 0078
Harvard 0180, 0068
Hauppauge 0693
Havermy 0093
Hitachi 0145, 0056, 0016, 0032, 0038, 0095, 0097, 0151, 0173, 0227, 0279, 0409, 0413, 0576, 0577, 0583
InFocus 0736, 0738, 0739, 0741, 0752, 0759
Infinity 0054
Innova 0037
Inteq 0017
JBL 0054
JCB 0000
JVC 0053, 0036, 0069, 0160, 0169, 0182
Janeil 0046
Jensen 0050
KEC 0180
KMC 0106
KTV 0180, 0030, 0039, 0183, 0185, 0217, 0280
Kamp 0216

Kawasho 0158, 0216, 0308
Kaypani 0052
Kenwood 0030, 0019
Kloss 0024, 0046, 0078
Konka 0628, 0632, 0638, 0703, 0707
LG 0056, 0442
LXI 0047, 0054, 0154, 0156, 0178, 0148, 0747
Loewe 0136, 0633, 0693, 0694
Logik 0016
Luxman 0056
MEI 0185
MGA 0150, 0030, 0178, 0019, 0155
MTC 0060, 0030, 0019, 0056, 0049, 0091, 0185, 0216
Magnavox 0054, 0030, 0179, 0020, 0024, 0028, 0036, 0096, 0186, 0187, 0230, 0386
Majestic 0016, 0015
Marantz 0054, 0030, 0037, 0444
Matsushita 0250
Megatron 0178, 0145, 0003
Memorex 0154, 0250, 0463, 0150, 0178, 0179, 0056, 0016, 0106
Mercury 0001
Midland 0047, 0017, 0051, 0039, 0032, 0135, 0747
Minutz 0021
Mitsubishi 0093, 0150, 0178, 0019, 0014, 0098, 0155, 0331, 0358, 0592
Motorola 0093, 0055
Multitech 0180, 0049, 0217
NAD 0156, 0178, 0166

NEC 0030, 0019, 0056, 0036,
 0170, 0434, 0455, 0497, 0704
NTC 0092
Netsat 0037
Nikko 0030, 0178, 0092, 0317
Nisato 0391
Noblex 0430
Noshi 0018
On Command 0531, 0876
Onwa 0180
Optimus 0154, 0250, 0166
Optiview 0756
Optonica 0093, 0165
Orion 0236, 0463, 0179
Ovation 0734
Panasonic 0250, 0051, 0055,
 0162, 0226, 0338, 0375
Penney 0047, 0156, 0051, 0060,
 0030, 0178, 0021, 0019, 0018,
 0056, 0039, 0002, 0003, 0027,
 0032, 0110, 0135, 0138, 0149,
 0309, 0747
Philco 0054, 0463, 0030, 0145,
 0019, 0020, 0028, 0096, 0302
Philips 0054, 0037
Pilot 0030, 0019, 0039
Pioneer 0038, 0166, 0172, 0679
Portland 0019, 0039, 0092
Princeton 0685, 0700, 0717
Prism 0051
ProPresenter 0728, 0733
Proscan 0047, 0747

Proton 0178, 0003, 0031, 0052,
 0466
Proxima 0734, 0735, 0737,
 0742, 0743
Pulsar 0017, 0019
Quasar 0250, 0051, 0165,
 0055, 0219
RCA 0047, 0051, 0093, 0019,
 0018, 0029, 0038, 0090, 0135,
 0174, 0254, 0278, 0679, 0747
Radio Shack 0047, 0154, 0165,
 0180, 0030, 0178, 0019, 0056,
 0039, 0032, 0409, 0747
Realistic 0154, 0165, 0180,
 0030, 0178, 0019, 0056, 0039,
 0032
Rhapsody 0183, 0185, 0216
Runco 0017, 0030, 0251, 0494,
 0497, 0603, 0612
SKY 0037
SSS 0180, 0019
Sampo 0030, 0039, 0032, 0052,
 0100, 0110
Samsung 0060, 0030, 0178,
 0019, 0056, 0032, 0037, 0329,
 0408, 0427, 0482, 0702
Samsux 0039
Sansei 0451
Sansui 0463
Sanyo 0154, 0088, 0107, 0146,
 0159, 0232, 0484
Scimitsu 0019
Scotch 0178
Scott 0236, 0180, 0178, 0019,
 0179, 0309

Sears 0047, 0054, 0154, 0156,
 0178, 0179, 0056, 0015, 0146,
 0148, 0149, 0159, 0168, 0171,
 0281, 0747
Semivox 0180
Semp 0156
Sharp 0093, 0165, 0039, 0153,
 0157, 0220, 0281, 0386, 0398,
 0491, 0688, 0689
Shogun 0019
Signature 0016
Simpson 0186, 0187
Sinudyne 0347
Sony 0000, 0011, 0080, 0111,
 0273, 0353, 0699
Soundesign 0180, 0178, 0179,
 0186
Spectricon 0003, 0137
Squareview 0171
Starlite 0180
Supre-Macy 0046
Supreme 0000
Sylvania 0054, 0030, 0020,
 0028, 0065, 0096, 0171, 0381
Symphonic 0180, 0171
TMK 0178, 0056, 0177
TNCi 0017, 0709
Tandy 0093
Tashiko 0588
Tatung 0055, 0003, 0049, 0396
Technics 0250, 0051
Technol Ace 0179
Technovox 0007

Techwood 0051, 0056, 0003
Teknika 0054, 0180, 0150,
 0060, 0019, 0179, 0056, 0016,
 0039, 0092, 0175, 0186, 0312,
 0322
Telefunken 0056, 0074, 0101,
 0702
Telemagic 0735
Tera 0031
Thomson 0209, 0210
Toshiba 0154, 0156, 0060,
 0036, 0149
Tosonic 0185
Totevision 0039
Trical 0157
Ultra 0391
Universal 0027
Vector Research 0030
Victor 0053
Video Concepts 0098
Vidikron 0054, 0242
Vidtech 0178, 0019, 0036
Viking 0046, 0312
Wards 0054, 0165, 0030, 0178,
 0021, 0019, 0179, 0056, 0016,
 0020, 0027, 0028, 0029, 0080,
 0096, 0111, 0174, 0202
Waycon 0156
White Westinghouse 0463,
 0623, 0624
Yamaha 0030, 0019
Zenith 0017, 0463, 0016, 0092,
 0624
Zonda 0003

Setup Codes for TV/ VCR Combinations

Aiwa 0680
Broksonic 0479
Citizen 0278
Colt 0072
Daewoo 0278
Emerson 0278, 0479
Funai 0000
GE 0240
GoldStar 0037
Harley Davidson 0000
Hitachi 0000
Lloyd's 0000
Magnasonic 0278, 0593
Magnavox 0081, 0000
Magnin 0240
Memorex 0162, 0037
Optimus 0162, 0593
Orion 0479
Panasonic 0162
Penney 0037, 0240
Quasar 0162
RCA 0240
Sansui 0000, 0479
Sanyo 0240
Sears 0037, 0000
Sony 0032, 0000
Sylvania 0081
Symphonic 0000, 0593
Toshiba 0845
White Westinghouse 0278
Zenith 0000, 0479, 0637

Setup Codes for TV/ DVD Combinations

Broksonic 0695
Konka 0719, 0720
Philips 0854
RCA 1022
Sansui 0695
Sylvania 0821
Toshiba 0695, 1045